


INSTRUCTION MANUAL

ROCK TYPE SPEAKER

AER-301T

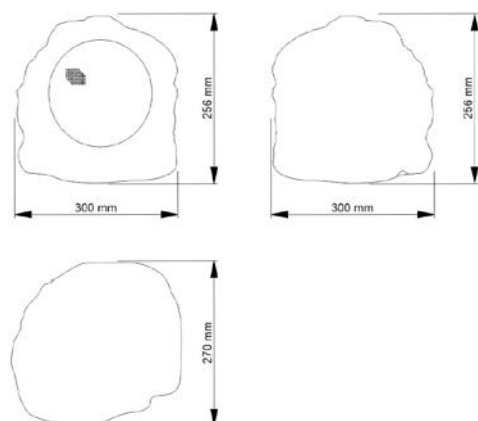

WARNING:

- Installation by qualified personnel only.
- Speakers must be wired in parallel and connected to the correct line terminals of amplifier.
- Ensure that all speakers have the same polarity with respect to each other.
- Do not select another tapings if the speaker is in use.
- No naked flame sources, such as lighted candles, should be placed on the apparatus.

SPECIFICATIONS

Model	AER-301T
Speaker	6.5" woofer + ½" tweeter
RMS Power	30 W at 100 V
100V Power Selection	30 W & 15 W
Impedance	333 Ω , 666 Ω & 8 Ω
Sensitivity	88 dB SPL at 1 W, 1 m & 1 kHz
SPL	103 dB at 32 W, 1 m & 1 kHz
Frequency Response	100 ~ 20000 Hz
IP Protection Range	IP-66
Dimensions (mm)	256 x 300 x 270
Mounting Hole Size (mm)	Ø300 x 50
Weight	4 kg
Finish	Glass fiber plastic

IMPEDANCE SELECTION

Impedance	100 V	Cable
333 Ω	30 W	Red
666 Ω	15 W	Green
8 Ω	8 Ω	Yellow
–	Common	Blue

- Dig a hole 5 cm deep and 30 cm wide.
- After connecting the audio cable, place the speaker in the soil and expose it 21 cm above the ground.
- Bury the cable 100mm underground.

