

Note:

Whilst every effort has been made to ensure that the information contained within this manual is correct, MONACOR INTERNATIONAL does not accept any liability for errors or omissions. Specifications and technical data are intended for guidance purposes only and may vary.




WWW.MONACOR.COM

Mounting Clamp for tube Ø 50 mm • SWL 100 kg




TA-100
Order No. 12.6760

Parts & Features

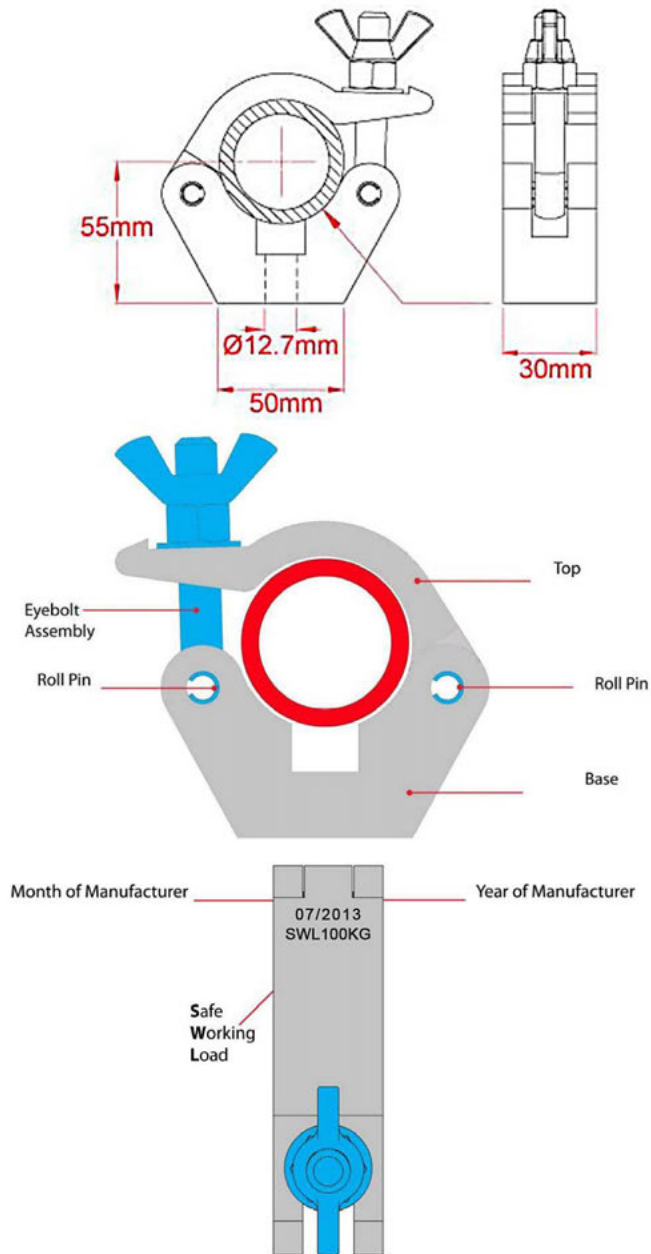

Usage

1. Never exceed the Safe Working Load (SWL) as shown on the clamp.
2. Only use the clamp within the designed tube parameters (48-51mm).
3. All clamps should be visually inspected before use. In the event of any damage, the clamp should be taken out of service and returned to an approved MONACOR INTERNATIONAL service agent for an inspection (see the dealer locator on our website for a comprehensive list of Authorized Service Agents).
4. When used in conjunction with other accessories, care must be taken to ensure the maximum SWL of any component is not exceeded.
5. MONACOR INTERNATIONAL does not recommend using clamps which do not fully encompass the tube for overhanging. All open clamps including hookclamps should be used in a vertical orientation only.

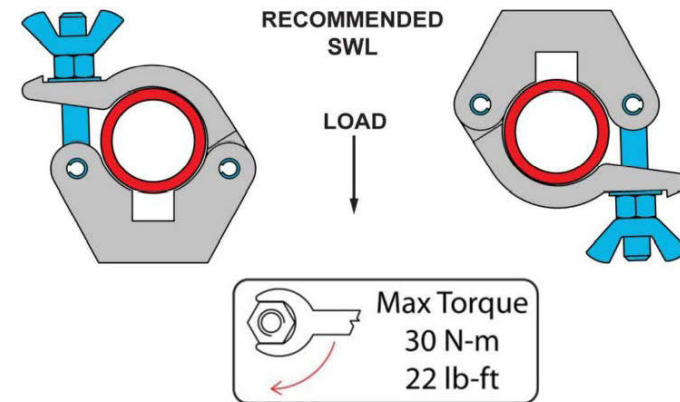

THE FOLLOWING APPLICATIONS WILL RESULT IN THE RECOMMENDED SWL BEING REDUCED DEPENDANT ON THE TUBE SURFACE FINISH & TORQUE SETTINGS APPLIED. PROOF LOADING ON INSTALLATIONS IS RECOMMENDED.

